

5. Set up the Aprisa SRq Protected Station

Login using the IP address of either the primary or secondary radio (do not use the PVIP address for login). All parameters will be automatically synchronized on both radios.

The Aprisa SRq has a factory default Terminal Operating Mode of Remote Station.



A single radio or a protected station in the Aprisa SRq network must be setup as a base station. The other radios or protected stations in the Aprisa SRq network are setup as remote stations or repeater stations.

Set the Ethernet Operating Mode and the Compliance Mode required.

Set the unique radio Network ID to be the same in your entire network including the Base Station ID.

Set the Aprisa SRq TX Frequency, RX Frequency, TX Power and Channel Size to comply with your site license.

Set the Antenna Port Configuration required.

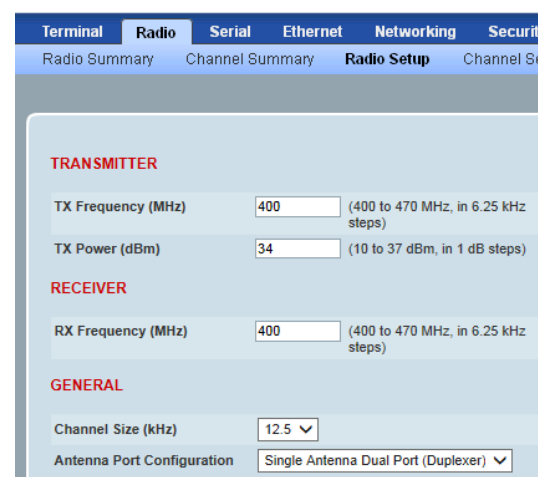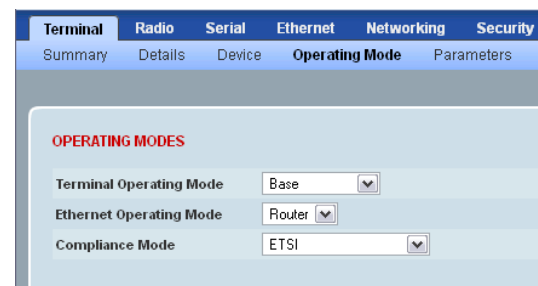

You can now configure the remaining protected station and network parameters and settings. For more information, please refer to the Aprisa SRq User Manual available from the 4RF website <https://www.4rf.com/secure> (login required).

Reboot both Primary and Secondary radios and restore the Hardware Manual Lock switch is set to AUTO.

The Aprisa SRq Protected Station is ready to operate.

6. Monitor the Aprisa SRq Protected Station signal strength

When the network is installed, the radio signal strength can be monitored on remote stations by setting the radio to Test Mode.

To enter Test Mode, press and hold the TEST button on front panel until all the LEDs flash green (about 3 - 5 seconds).


In Test Mode, the LED Display panel presents a real time visual display of the RSSI. This can be used to adjust the antenna for optimum signal strength.

Note: The response time is variable and can be up to 5 seconds.

To exit Test Mode, press and hold the TEST button until all the LEDs flash red (about 3 - 5seconds).

If the network is operating correctly, the LEDs will show:

- Active radio - the OK, MODE and AUX LEDs will be light green and the TX and RX LEDs will be solid or flash green.
- Standby radio - the OK will light green, the MODE LED will light orange, the AUX LED will light green and the TX and RX LEDs will light green (steady).

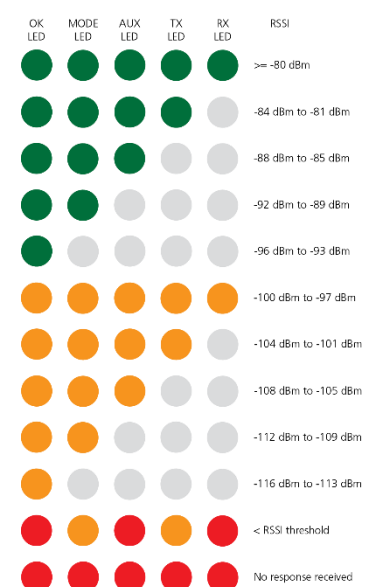

Quick Start Guide

Aprisa SRq Protected Station

Contents

Follow these steps to operate your Aprisa SRq radio:

1. Check the box contents
2. Install the Aprisa SRq protected station and connect the protection earth
3. Connect the Antenna and apply power to the Aprisa SRq protected station
4. Connect to the Aprisa SRq protected station
5. Set up the Aprisa SRq protected station
6. Monitor the Aprisa SRq protected station signal strength

1. Check the box contents *

The Aprisa SRq Protected Station is shipped to you in a box containing the following:

Aprisa SRq Protection Station:

- One Aprisa SRq Protected Station containing two Aprisa SRq radios pre cabled to the protection switch with product options of:
 - (1) Standard Protected Station - single antenna with or without duplexer (part number suffix ends with AA)
 - (2) Dual antenna Protected Station - dual antenna with or without duplexer (part number suffix ends with DA)
- Two rack mounting brackets
- Two 2 pin female power connectors
- One 4 pin female remote control connector



2. Install the Aprisa SRq Protected Station and connect the protection earth

The Aprisa SRq Protected Station is designed to mount in a standard 19" rack.




Rack mounted Aprisa SRq Protected Station without duplexer



Rack mounted Aprisa SRq Protected Station with duplexer

The Aprisa SRq Protected Station has an earth connection point on the bottom right of the chassis. Use the supplied M4 screw to earth the enclosure to a protection earth.

The antenna feeder cable should use grounding kits for lightning protection as specified or supplied by the coaxial cable manufacturer to properly ground or bond the cable outer.

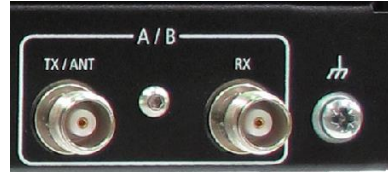

Note * When the spare Aprisa SRq Protection Switch is supplied (APSU-XPSW-*nnn*), the item includes the Aprisa SRq Protection Switch chassis, mounting brackets, 2x power connectors, 1x remote control connector but no radios.

3. Connect the antenna and apply power to the Aprisa SRq Protected Station

Connect the antenna to the Protected Station antenna port (TNC female connector). If the antenna is not available, terminate the TX/ANT A/B antenna port with a TNC male 50 ohm terminator (10 Watts min). If the Protected Station is the dual antenna option, then both TX/ANT A/B antenna ports / terminators must be connected.

The Aprisa SRq Protected Station has two possible power supply input options nominal 12 VDC (+10 VDC and +30 VDC negative earth) and nominal 48 VDC (18 to 60 VDC floating) and consumes up to 42 Watts. Two power connectors (Molex 2 pin female) are supplied fitted to the Protected Station. Wire your power source to the two power connectors (- / +) and plug the connectors into the Protected Station. The connector screws can be fastened to secure the connectors.



Note: The radio fuses will blow if the connected power supply is over voltage, or the polarity is reversed. Spare fuses are located on the Protection Switch board (see the 'Replacing Protection Switch Fuses' section of the Aprisa SRq User Manual).

Turn your power source on. All the LEDs on both radios will flash orange for one second and then change to:

- Active radio - the OK, MODE and AUX LEDs will light green and the TX and RX LEDs will light green (steady or flashing).
- Standby radio - the OK, TX, RX and AUX LEDs will light green and the MODE LED will flash green.

4. Connect to the Aprisa SRq Protected Station

Ensure that the Hardware Manual Lock switch is set to radio A (this is a factory default setting). This prevents random switching when changing the radio settings.

The Aprisa SRq primary radio (radio A) in the Protected Station has a factory default IP address of 169.254.50.10 and the secondary Aprisa SRq radio (radio B) in the Protected Station has a factory default IP address of 169.254.50.20, both with a subnet mask of 255.255.0.0.

- Set up your PC for a compatible IP address e.g. 169.254.50.1 with a subnet mask of 255.255.0.0.
- Connect your PC network port to one of the Aprisa SRq Protected Station Ethernet ports (1 to 4 depending on product option).
- Open a browser and enter <http://169.254.50.10>.

Note: The Aprisa SRq has a self-signed security certificate which may cause the browser to prompt a certificate warning. It is safe to ignore the warning and continue. The valid certificate is 'Issued By: 4RF-APRISA' which can be viewed in the browser.

- Login to the primary radio with the default login 'admin' and password 'admin'.
- Each radio in the network and both radios in the Protected Station must be setup with unique IP addresses on the same subnet.

Set the Primary IP address and the Secondary IP address to network compatible IP addresses. Set the Protected Station Virtual IP Address. This is the IP Address of the active radio used in both bridge and router modes. Set the Subnet mask and Gateway.

Terminal Name	Protected Station
Location	Wellington
Contact Name	4RF Limited
Contact Details	support@4rf.com
IP Address	172.18.120.30
Subnet Mask	255.255.0.0
Gateway	172.18.0.4
Date and Time	24/02/2014 16:20

Protected Station	Primary	Secondary
Primary IP Address	172.18.120.30	
Secondary IP Address	172.18.120.31	
Protected Station Virtual IP Address	172.18.120.40	
Subnet Mask	255.255.0.0	
Gateway	172.18.0.4	

If the IP addresses of radios in the protected station are unknown for some reason, they can be shown or changed via the Command Line Interface (CLI) on the radios MGMT USB ports. USB to UART Bridge VCP Drivers are required to connect the radio USB port to your PC. You can download and install the relevant driver from <https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>. Set the PC serial port to 38,400 baud, 8 data bits, no parity and 1 stop bit, with no hardware flow control.

- Open the protected station drawer by sliding it from the front
- Connect your PC USB port to the primary Aprisa SRq (A) MGMT USB port
- Login to the radio with the default login 'admin' and password 'admin'.
- At the command prompt >> type 'cd APRISASR-MIB-4RF' and enter
- At the command prompt >> type 'ls Terminal' and enter to show the existing IP address
- At the command prompt >> type 'set termEthController1IpAddress xxx.xxx.xxx.xxx' and enter to change the IP address.

The Protected Station is configured in the 4RF factory as a protected station. If for some reason it is not setup as a Protected Station, please see 'Creating a Protected Station' in the Aprisa SRq User Manual.