

5. Set up the Aprisa SRq radio

The Aprisa SRq has a factory default Terminal Operating Mode of Remote Station.

One radio in the Aprisa SRq network must be setup as a Base Station.

The other radios in the Aprisa SRq network are setup as Remote Stations or Repeater Stations.

Set the Ethernet Operating Mode required.

Set the unique radio Network ID to be the same in your entire network including the Base Station ID.

Set the Aprisa SRq TX Frequency, RX Frequency, TX Power and Channel Size to comply with your site license.

Also, set the Antenna Port Configuration, Modem Mode e.g. ETSI / FCC, the fixed TX Modulation Type (base station radio) and if ACM is enabled.

OPERATING MODES

Terminal Operating Mode: Base

Ethernet Operating Mode: Bridge

RF Operating Mode: Standard

RF NETWORK DETAILS

Network ID (FAN): CAFE

Base Station ID: 2

Network Radius: 1

RF CONFIGURATION

	TX Frequency (MHz)	TX Power (dBm)	PEP (dBm)	RX Frequency (MHz)	Enabled
1	400	15	18	400	<input checked="" type="checkbox"/>
2	406	30	33	406	<input type="checkbox"/>

GENERAL

Channel Size (kHz): 12.5

Antenna Port Configuration: Single Antenna Single Port

You can now configure the remaining terminal and network parameters and settings. Please refer to the Aprisa SRq User Manual for detailed instructions.

6. Monitor the Aprisa SRq radio signal strength

When the network is installed, the radio signal strength can be monitored on remote stations by setting the radio to Test Mode.


To enter Test Mode, press and hold the TEST button on the radio LED panel until all the LEDs flash green (about 3 - 5 seconds).

In Test Mode, the LED Display panel presents a real time visual display of the RSSI. This can be used to adjust the antenna for optimum signal strength.

Note: The response time is variable and can be up to 5 seconds.

To exit Test Mode, press and hold the TEST button until all the LEDs flash red (about 3 - 5seconds).

The OK, MODE and AUX LEDs will be solid green and the TX and RX LEDs will be solid or flash green if the network is operating correctly.

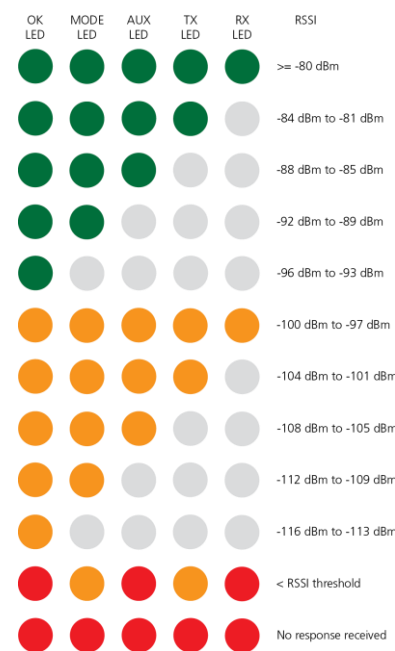

For more information, please refer to the Aprisa SR+ User Manual available from the 4RF website <https://www.4rf.com/secure> (login required).



Quick Start Guide

Aprisa SRq Radio

Contents

Follow these steps to operate your Aprisa SRq radio:

1. Check the box contents
2. Install the Aprisa SRq radio and connect the protection earth
3. Connect the Antenna and apply power to the Aprisa SRq radio
4. Connect to the Aprisa SRq radio
5. Set up the Aprisa SRq radio
6. Monitor the Aprisa SRq radio signal strength

1. Check the box contents

The Aprisa SRq is shipped to you in a box containing an Aprisa SRq radio fitted with power connector




2. Install the Aprisa SRq radio and connect the protection earth

The Aprisa SRq has four threaded holes (M4) in the base and two holes (for M5 screws) through the enclosure for mounting. Mounting options include:

- DIN rail mounting with the Aprisa SRq Mounting Bracket (optional accessory part number 'APSB-MBRK-DIN')
- Wall and rack shelf mounting
- Outdoor enclosures

The Aprisa SRq mounting options are shown below:

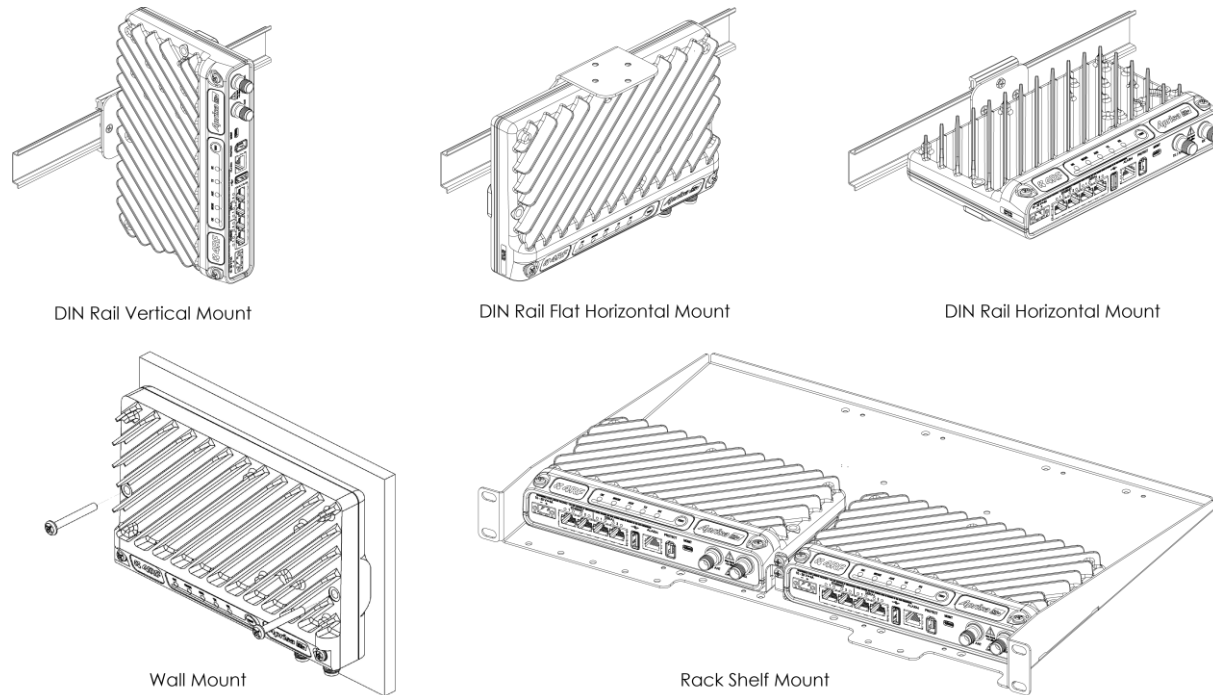

The Aprisa SRq has an earth connection point on the top left and the top right of the enclosure. Use the supplied M4 screws to earth the enclosure to a protection earth.

The antenna feeder cable should use grounding kits for lightning protection as specified or supplied by the coaxial cable manufacturer to properly ground or bond the cable outer.



Warning: If the Aprisa SRq is operated in an environment where the ambient temperature exceeds 50°C, the Aprisa SRq must be installed within a restricted access location to prevent human contact with the enclosure heatsink.

3. Connect the antenna and apply power to the Aprisa SRq radio

Connect the antenna to the antenna port TNC female connector. If the antenna is not available, terminate the 'TX / Ant' port with a TNC male 50 ohm terminator (10 Watts min).

The Aprisa SRq is operated from a DC source of voltage between +10 VDC and +30 VDC (negative earth) and consumes up to 35 Watts. External power supplies are available from 4RF as accessories (see the Aprisa SRq User Manual).

The power connector (Molex 2 pin female) is supplied fitted to the radio. Wire your power source to the power connector (- / +) and plug the connector into the radio. The connector screws should be fastened to secure the connector.



Note: The radio fuses will blow if the connected power supply is over voltage or the polarity is reversed. Two spare fuses are located inside the enclosure (see the 'Spare Fuses' section of the Aprisa SRq User Manual).

Turn your power source on. The radio LEDs will flash orange for one second and then the OK, MODE, AUX LEDs will light solid green and the TX and RX LEDs will flash red. This is because the factory default Terminal Operating Mode for all Aprisa SRq radios is set to Remote Station.

When the radio has been configured and has registered with the network, the TX and RX LEDs will be solid or flash green if the network is operating correctly.

The Aprisa SRq radio is ready to operate.

Warning: On link operation, RF energy is radiated from the antenna. Do not stand in front of the antenna.

4. Connect to the Aprisa SRq radio

The Aprisa SRq has a factory default IP address of 169.254.50.10 with a subnet mask of 255.255.0.0.

Each radio in the Aprisa SRq network must be setup with a unique IP address on the same subnet.

If the IP address of the radio is unknown, it can be changed via the Command Line Interface on the radio MGMT USB port:

- Connect your PC USB port to the Aprisa SRq MGMT USB port. USB to UART Bridge VCP Drivers are required to connect the radio USB port to your PC. You can download and install the relevant driver from <https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>. Set the PC serial port to 38,400 baud, 8 data bits, no parity and 1 stop bit, with no hardware flow control.
- Login to the radio with the default login 'admin' and password 'admin'.
- At the command prompt >> type 'cd APRISASR-MIB-4RF' and enter.
 - type 'set termEthController1IpAddress xxx.xxx.xxx.xxx' and enter.
 - type 'set termEthController1SubnetMask 255.255.0.0' and enter.
 - type 'set termEthController1Gateway xxx.xxx.xxx.xxx' and enter.

If the IP address of the radio is known or is the default IP address, it can be changed via the Ethernet port:

- Setup your PC for a compatible IP address e.g. 169.254.50.1 with a subnet mask of 255.255.0.0.
- Connect your PC network port to one of the Aprisa SRq Ethernet ports.
- Open a browser and enter <http://169.254.50.10>.
 - Note: The Aprisa SRq has a Self Signed security certificate which may cause the browser to prompt a certificate warning. It is safe to ignore the warning and continue. The valid certificate is 'Issued By: 4RF-APRISA' which can be viewed in the browser.
- Login to the radio with the default login 'admin' and password 'admin'.
- Change the IP address, Subnet mask and Gateway to network compatible IP addresses.

